Quick Start

LG optimus G Pro™

Get to Know Your Phone

Proximity sensor

Earpiece

Camera lens

QuickButton (customizable)

Power/lock key

Volume up/down keys

Touchscreen

Home key

Back key

Menu key

Micro USB charging port

Microphone

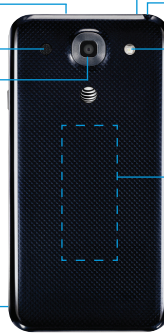

Infrared sensor

Microphone

3.5 mm headset jack

Speaker

Flash

Camera lens

NFC touch point

Back cover notch

Note: For more information on your device, visit **att.com/Tutorials**.

Set Up Your Phone

Install a MicroSIM and microSD™ Card

① With your phone off, remove the phone's back cover using the notch on the side. Remove the battery using the notch at the corner.

② Slide a microSIM card into its slot with the gold contacts facing downward.

③ Slide the microSD card into its slot with the gold contacts facing downward.

④ Replace the battery and back cover.

AT&T Ready2Go

Ready2Go helps you set up your device by using your computer.

- Configure email, contacts, and Wi-Fi®.
- Customize your home screen, wallpaper, ringtones, and more.

Get Started

① When your phone first starts up, you'll see the AT&T Ready2Go wizard.

② Tap **Get Started**. You will see a web address.

③ On your computer's browser, go to the web page.

④ Enter the information and choose the setup you want.

⑤ Save your profile to update your device.

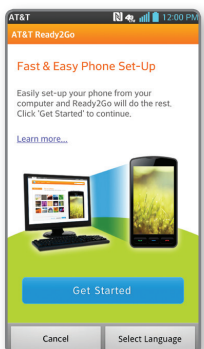

Note: To skip the wizard and update later, tap **Cancel** at the bottom of the screen. To return to the wizard from the home screen, tap **Apps** > **AT&T Ready2Go** and follow the steps above.

Set Up Your Accounts

Adding accounts will populate email, contacts, calendar, and other information on your device. You may want to set up accounts over Wi-Fi to save on your data plan usage.

① On any screen, swipe down from the top of the screen to bring down the Notifications Panel.

② Tap ⚙ > **General** > **Accounts & sync** > **Add Account**.

③ Select the type of account you would like to add. Enter your information and follow any additional on-screen instructions.

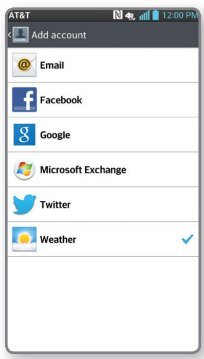

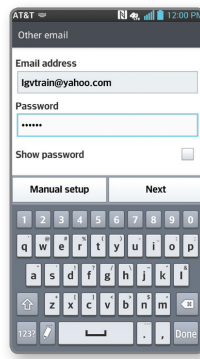

Note: Contact your IT administrator to help set up your corporate Microsoft® Exchange account.

Download Apps with Google Play™

Once you have set up your Google™ account, you can download apps from the Play Store. You may want to download apps over Wi-Fi to save on your data plan usage.

① From the home screen, tap **Apps** > **Play Store**.

② Tap a category to browse selections, or tap to search for an item. Enter a keyword and tap on the keypad.

③ Tap an app and follow the on-screen installation instructions. Once the app has been downloaded and installed, you will see a notification in the Notifications Bar.

④ To open the app, swipe down from the top of the screen and tap the notification. You can also find the app in **Apps**.

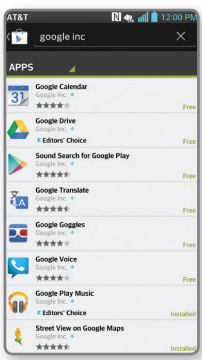

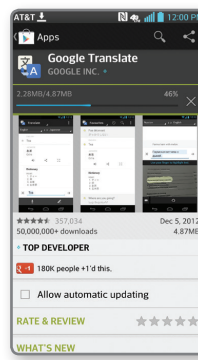

Note: To purchase a paid app, you will need to set up a payment method with Google Wallet.™

Customize Your Phone

Customize a Home Screen

① Press and hold an empty spot on a home screen and choose a category:

- **Apps:** Add application shortcuts from the app tray.
- **Downloads:** Add downloaded application shortcuts.
- **Widgets:** Add dynamically updating widgets.
- **Wallpapers:** Change your home screen wallpaper.

② To move an item, press and hold it and drag it to a new location. To delete it, drag it to **Remove**.

Customize Your Sounds

① On any screen, swipe down from the top of the screen to bring down the Notifications Panel.

② Tap > **Sound**. You can change your ringtones, set notification sounds, and adjust your touch feedback options.

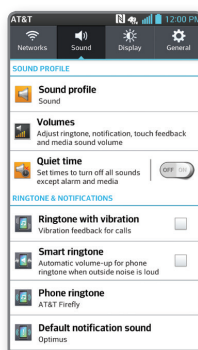

Note: To customize the QuickButton press the **Menu Key** and tap **All settings** > **General** > **QuickButton**.

Calling and Voicemail

Make a Call

① From the home screen, tap **Phone**.

② Enter a phone number or spell the name of a contact. Tap the contact and then tap to place the call.

Access Voicemail

① From the home screen, tap **Phone**.

② Tap .

③ Follow voice prompts to listen to messages.

Access Call Logs

① From the home screen, tap **Phone**.

② Tap **Call logs**.

③ Tap an entry to view it.

④ Tap to call or to send a message. Tap to create a new contact or add the number to an existing entry.

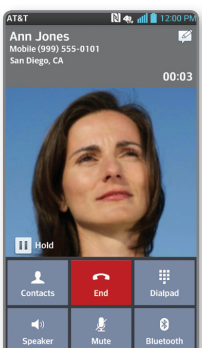

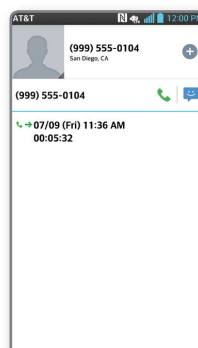

Text and Picture Messaging

① From the home screen, tap **Messaging**.

② Tap .

③ In the **To** field, enter a number or tap to select a name from your contact list. You can enter several names to send your message to multiple people.

④ Enter your message.

⑤ Tap to attach a file.

⑥ Tap **Send** to send the message.

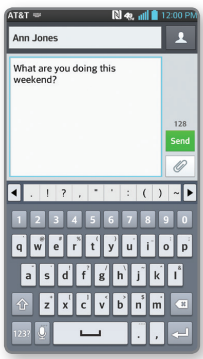

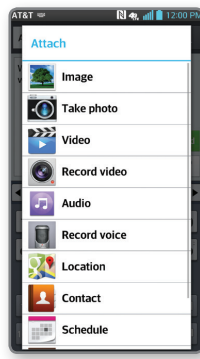

Please don't text and drive.

Messaging rates apply.

Browse the Web

① From the home screen, tap **Browser**.

② Tap the address bar at the top of the page and enter an address. You may need to scroll to the top of the page to access the address bar.

③ Tap **Go** on the keyboard.

Use the Browser Bar

Access Facebook® and news feeds, find related apps, share content, and more.

① To reveal the Browser Bar, swipe up from the bottom of the browser screen.

② To add a button, tap **Add More** and select a choice or create one of your own.

③ Go to **Settings** > **Disable Browser Bar** to remove the Browser Bar.

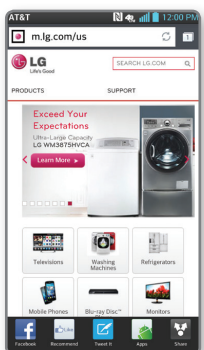

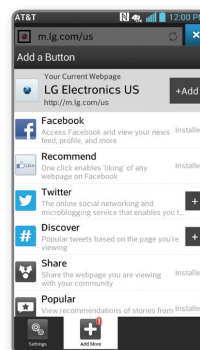

Take a Picture/Record a Video

① From the home screen, tap **Camera**.
② Tap to take a photo.
③ Tap to switch to the camcorder.
④ Tap to start recording. To take a still shot while recording, tap .
⑤ Tap to stop recording.

Share Photos

① From the home screen, tap **Apps** > **Gallery**.
② Tap an album.
③ Tap and then tap the image(s) you wish to share.
④ Tap **Share**.
⑤ Select how to share and follow the on-screen instructions.

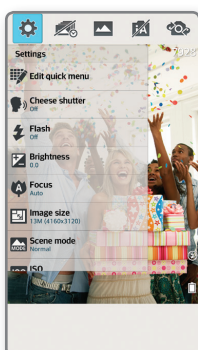

Note: To access the front-facing camera or camcorder, tap . Tap to view and change camera/camcorder settings.

Get Connected

Use Bluetooth®

① On any screen, swipe down from the top of the screen to bring down the Notifications Panel and tap > **Networks** > **Bluetooth**.

② If *Bluetooth* is off, tap OFF ON to enable it.

③ LG Optimus G Pro™ will automatically search for devices. Tap the name of the device you wish to pair with. See the *Bluetooth* device's user manual for more information on pairing.

Connect to Wi-Fi

① On any screen, swipe down from the top of the screen to bring down the Notifications Panel and tap > **Networks** > **Wi-Fi**.

② If Wi-Fi is off, tap OFF ON to enable it.

③ Tap a network name. Enter a password if required and then tap **Connect**.

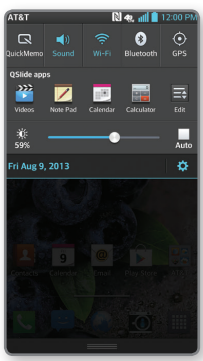

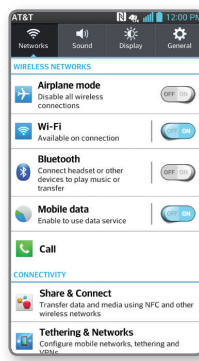

Note: The Notifications Panel contains Quick Settings for *Bluetooth*, Wi-Fi, and more. Tap a button to toggle the setting on or off.

Transfer Music and Pictures

① Connect your Optimus G Pro to your computer with a USB cable. Steps may vary depending on your operating system.

② You may be prompted to install PC programs. Tap **OK**.

③ Tap **Media sync (MTP)**.

④ On your PC, choose **Open device to view files** using Windows Explorer.

⑤ Your phone will appear as another hard drive on your computer. Click on the drive to view it.

⑥ Drag and drop your files* into the corresponding folders, such as Music, Movies, or Pictures. You can also transfer files from your PC to your phone.

⑦ When you're finished transferring files, return to the USB connection type screen and choose **Charge only**. You may now safely unplug your device.

AT&T
12:00 PM
USB connection type
Charge only
Charge with a USB cable
Media sync (MTP)
Transfer files in Windows; for Macs, use Android file transfer (see www.android.com/filetransfer)
USB tethering
Share phone's mobile network with PC
PC software
Connect to PC software for LG mobile
Camera (PTP)
Transfer photos by connecting as a camera (transfer files when MTP is not supported)

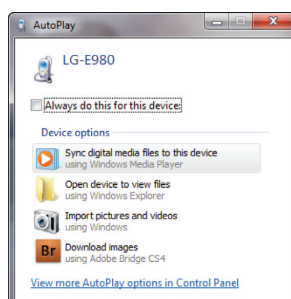

*Files must be Digital Rights Management (DRM) free.

Multitask with QSlide Function

From any screen, bring up a notepad, calendar, or calculator as a window inside your screen.

① From any screen, swipe down from the top of the screen to bring down the Notifications Panel.

② Tap one of the QSlide apps: **Videos**, **Note Pad**, **Calendar**, or **Calculator**. The app will appear as a resizable, moveable window on the screen.

③ Drag the corner to enlarge the window and drag the top bar to move it. Tap ⛶ to make the QSlide app full size. Tap ⛶ to make the app smaller again. Use the slider to adjust the transparency of the window.

④ To exit the QSlide function, tap ✕.

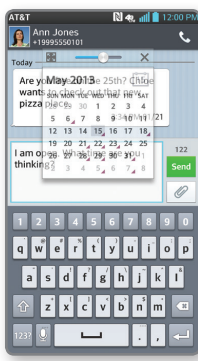

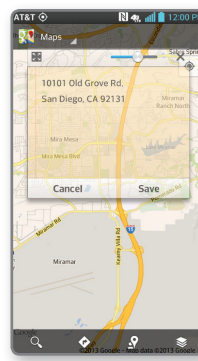

Note: The QSlide function is also available for Note Pad, QuickMemo, Calculator, Calendar, and user-generated videos.

AT&T Services

myAT&T: Track your usage, review and pay your bill, and update your data plan services.

AT&T DriveMode™: Silence notifications, set an auto-reply so people will know you're driving, and more.

AT&T Locker™: Safely store and share all your photos, videos, and documents with up to 5 GB of free storage.

AT&T Navigator®: Get voice-guided, turn-by-turn driving directions and traffic updates.

AT&T Smart Wi-Fi: Maximize your battery performance and data plan, simplify access to AT&T Hot Spots and Wi-Fi networks, automate your Wi-Fi connections, and track your data usage.

Mobile TV: Watch LIVE, on-demand, and downloadable mobile TV.

Messages: Manage your text messages, call history, voicemail, and more, all in one convenient place.

Mobile Hotspot: Share your mobile network data connection with other Wi-Fi devices.

Data rates may apply. Mobile TV and AT&T Navigator require a separate subscription. Mobile TV requires mobile broadband service. Service not available in all areas. Programming subject to blackout restrictions. Download and watch capability available for select content, requires Wi-Fi connection, and is available for viewing for limited time periods.

Jot a QuickMemo™

Capture screens, draw on them, and share them with family and friends with QuickMemo.

① To use QuickMemo, swipe down on the Notifications Bar and tap **QuickMemo**.

② Use your fingertip to draw or write on the screen.

③ Tap to change the pen type or color.

④ If you make a mistake, tap to access the eraser, or tap to undo your last pen stroke.

⑤ Tap to interact with your phone while keeping the memo on top.

⑥ To return to your memo, tap . You will return to the screen where you were when you started QuickMemo.

⑦ To save your creation, tap . Tap and follow on-screen instructions to share it.

⑧ To exit QuickMemo at any time, press the **Back Key** .

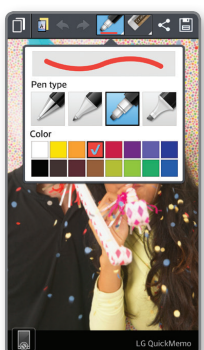

Note: You can also access QuickMemo by quickly pressing the QuickButton.

Share Files with Android™ Beam

Android Beam uses Near Field Communication (NFC) to quickly and easily share files such as browser pages, contacts, images, and music with another NFC-capable device.

① Before you begin, make sure **NFC** and Direct/Android Beam are enabled on your phone.

② With the content you want to send on the screen, place your Optimus G Pro back to back with another NFC-capable device to activate data exchange.

③ Tap the content to send it. The other device may need to accept the transfer.

Use NFC Tags

With NFC you can instantly change your phone settings to suit your environment.

- Touch the back of your phone to an NFC tag to automatically change your phone's settings.

Note: To turn NFC and Direct/Android Beam on or off, swipe down from the top of the screen and tap > **Networks** > **Share & Connect**.

NFC tags are sold separately.

Make Your Battery Last

① From the home screen, press the **Menu Key**.

② Tap **All settings** > **General** > **Battery**.

③ Tap **Battery saver** to select the features you'd like to turn off or change when Battery saver is enabled, such as Wi-Fi or screen brightness.

④ Tap OFF ON to turn on Battery saver.

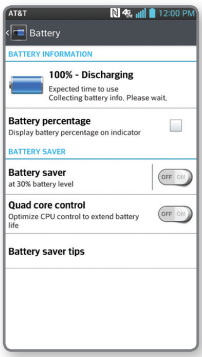

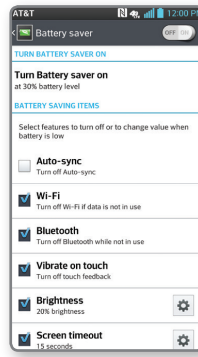

Network Indicators

Your 4G LTE wireless device will indicate which of the AT&T wireless networks you are connected to. A network indicator does not necessarily mean that you will experience any particular upload or download data speeds.

4G LTE: Connected to the AT&T 4G LTE network.

4G: Connected to the AT&T HSPA+ network. The AT&T HSPA+ network is capable of delivering 4G speeds when combined with enhanced backhaul. 4G availability is increasing with ongoing backhaul deployment.

E: Connected to the AT&T EDGE/2G network.

Actual data upload and download speeds depend on various factors, including the device, network utilization, file characteristics, terrain, etc. Learn more at: **wireless.att.com/learn/articles-resources/wireless-terms.jsp**, your AT&T Wireless Customer Agreement, Section 3.2 "Where and How Does AT&T Service Work?" The AT&T HSPA+ network can deliver 4G speeds when combined with enhanced backhaul. Your wireless device can't distinguish between HSPA+ cell sites with enhanced backhaul and those without. Enhanced backhaul not available everywhere. Learn more at **att.com/network**.

Limited 4G LTE availability in select markets. 4G speeds delivered by LTE, or HSPA+ with enhanced backhaul, where available. Deployment ongoing. Compatible device and data plan required. LTE is a trademark of ETSI.

Find More Information

On The Web:

- Find tutorials at **att.com/Tutorials**.
- Find device specifications, user manuals, troubleshooting, and user forums at **att.com/DeviceSupport**.
- Manage your wireless account, including suspending service if your phone is stolen, at **www.att.com/myatt**.

Apps on Your Phone:

- Access how-to videos for Optimus G Pro at **Apps** > **Device Help**.
- Access your account at **Apps** > **myAT&T**.

Give Us a Call:

Call AT&T Customer Care at 1-800-331-0500 or dial 611 from any AT&T mobile phone for assistance with your service or device.

Find Accessories

Accessories for your smartphone are available at **att.com/WirelessAccessories** or visit your local AT&T store.

LG and the LG logo are registered trademarks of LG Corp. Optimus G Pro is a trademark of LG Electronics USA, Inc. © 2013 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property. All other marks contained herein are the property of their respective owners.

Printed in Korea

P/N XXXXXXXXXXX(XX)